


How to put an earmould in an ear

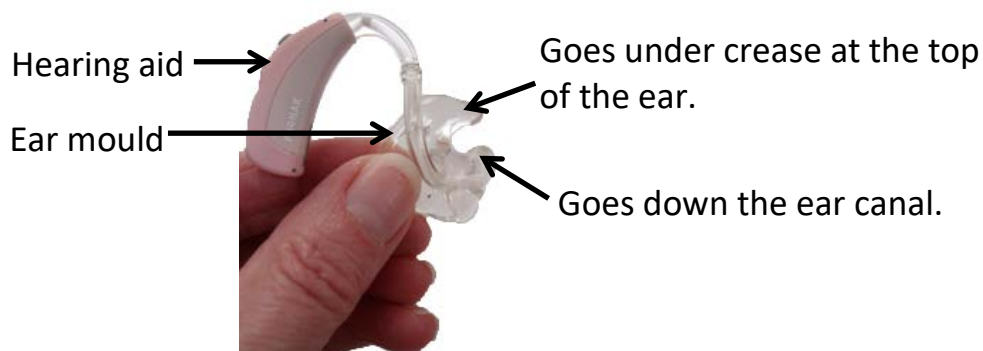

This is an ear mould and hearing aid for a right ear

1.



Hold the earmould at the back with your finger and thumb.

Put it close to the ear.

2.



Place the part of the earmould that goes down the ear canal into position.

3.



Then put into place the part of the earmould that goes into the crease at the top of the ear.

4.



Use your other hand to pull down the earlobe. Doing this will help straighten the ear canal and make it easier to put the earmould in place.

5.



Push the earmould firmly in.

6.



✓ Correctly fitted earmould.

Make sure the hearing aid is put behind the ear and is switched on.

7.



✗ Incorrectly fitted earmould.

The top part of the earmould is not tucked into the crease at top of the ear. This will be uncomfortable to wear and it will whistle.

Take it out and try again!